



STOURFLEX®


J & P Supplies Ltd

Expansion Joints & Pipeline Equipment

Installation, Operation and Maintenance Instructions for Double Tied Stainless Steel Lateral Expansion Joints.

- Storage.** Double tied stainless steel lateral expansion joints should be stored in a clean dry area and be protected from damage caused by other items of plant and equipment. Care should also be taken in transporting lateral expansion joints to prevent damage to the bellows
- Inspection.** Double tied stainless steel lateral expansion joints should be inspected for any internal or external damage to the bellow's convolutions.
- Selection.** The Stourflex range of Double Tied stainless steel lateral expansion joints are designed to be used on a wide range of industrial applications. Check that the correct lateral expansion joint has been selected for the operating conditions that exist. Temperature, pressure and movement should all be confirmed as the wrong selection may result in failure of the system. Check that the correct number of lateral expansion joints are being installed to accommodate the total amount of movement on the system.
- Installation.** When lifting or moving double tied stainless steel lateral expansion joints into position they must be fully supported over their entire length. During installation they must be fully supported over their entire length to prevent damage to the bellows convolutions caused by excess movement. Lateral expansion joints are normally installed in changes in pipework direction. They should not be extended or compressed. Cold pull can be applied as and when required. If a lateral expansion joint has been supplied with internal flow sleeves, it should be installed with the " → " in the correct flow direction. Bellows convolutions should be protected from damage during installation due to rotation or weld spatter etc. Lateral expansion joints require anchors and guides to ensure their correct performance. For further details on the use of lateral expansion joints see guidance notes.

Typical examples where double tied stainless steel lateral expansion joints are used to accommodate thermal expansion in pipework.

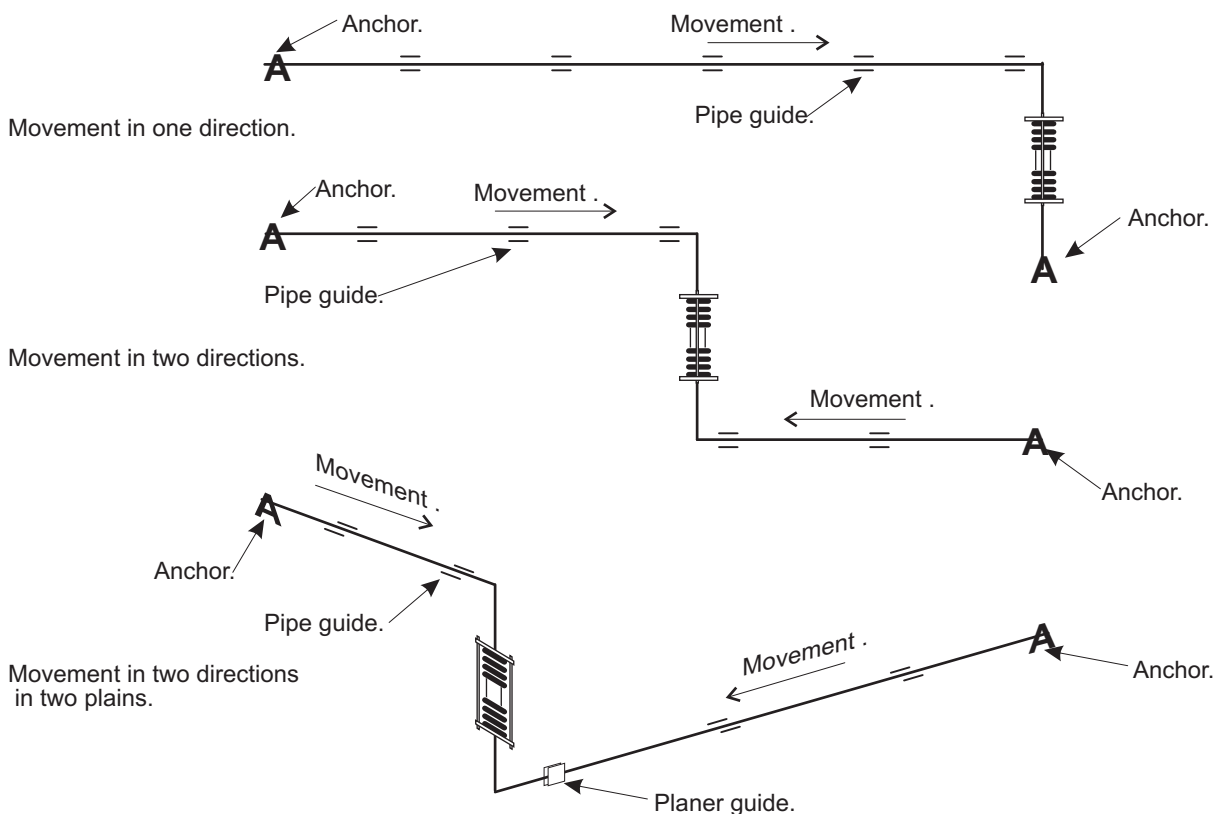

03/2009/C34




STOURFLEX®

J & P Supplies Ltd

Expansion Joints & Pipeline Equipment

Installation, Operation and Maintenance Instructions for Double Tied Stainless Steel Lateral Expansion Joints.


Installation Continued. Pipework should be correctly aligned. Threaded tie bar assemblies should be fully tightened and bellows installed at their correct installation length. Pipework should be guided to direct movement into the double tied stainless steel lateral expansion joint. Pipe guides should be installed as per specification or details given in guidance notes. If cold pull is to be applied the necessary gap should be left in the pipework after anchors and lateral expansion joints have been installed.

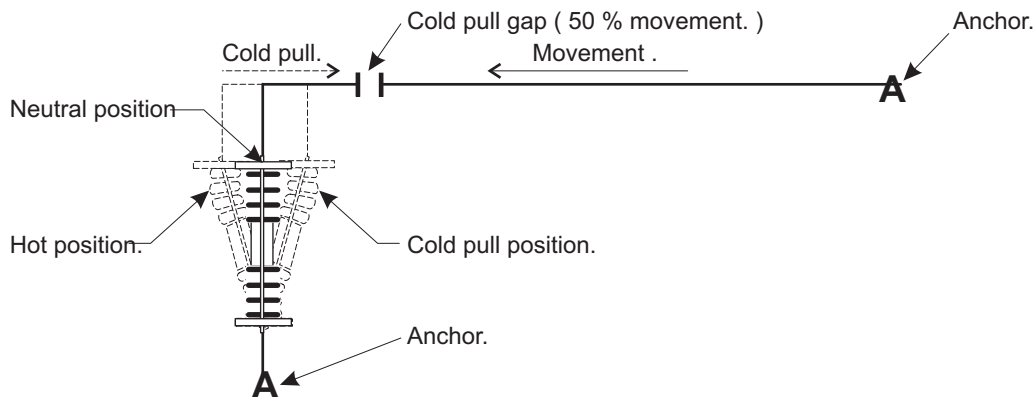

Test Pressure. If a hydraulic pressure test is to be carried out on a system containing lateral expansion joints ensure that anchors and guides have been correctly fitted before the test is carried out. Ensure that the test pressure (usually 1.5 x working pressure) does not exceed the test pressure of the lateral expansion joint being installed. A visual inspection of the double tied lateral expansion joint and associated pipework should be carried out during and after the test to ensure the installation is operating correctly.

Anchoring. Double tied lateral expansion joints must be securely anchored and adequately guided to ensure their correct performance. See guidance notes for details and calculations on anchoring of pipework. Anchors are used to divide the system into manageable sections. Anchors must be spaced to suit the lateral expansion joints being installed.

Example

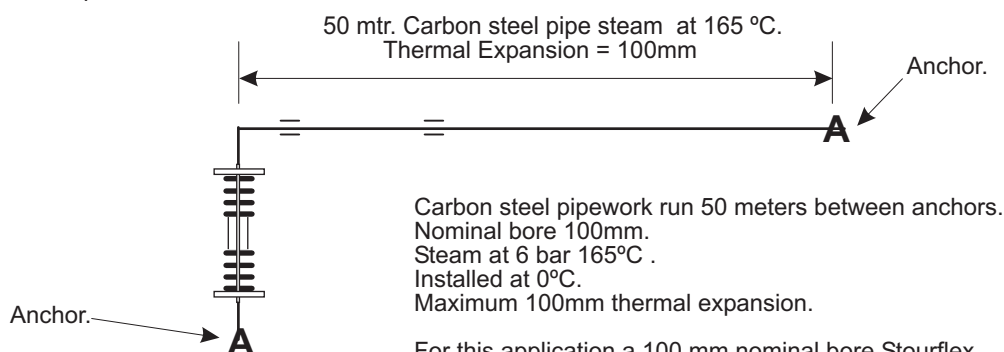

Carbon steel pipework run 50 meters between anchors.
Nominal bore 100mm.
Steam at 6 bar 165°C .
Installed at 0°C.
Maximum 100mm thermal expansion.

For this application a 100 mm nominal bore Stourflex
Type JP120 double tied stainless steel lateral expansion joint
should be selected.
Movement capability† 50mm (100mm total) lateral
movement.

Maintenance When properly installed and used at their correct operating temperature and pressure, double tied stainless steel lateral expansion joints will give many years of trouble free service. However the expansion joints should be periodically inspected for signs of deterioration. Anchors and pipe alignment should also be examined. Anchor failure can result in a breakdown of the system. If insulation is to be used it should be removable to allow inspection to be carried out.